

Codoon Smartband 2 Style

(M/N):HB-B02,HB-B021,HB-B022,HB-B023

User:white-collar workers,office staff,etc.

Functions:recording steps, distance, calories; recording sleep quality

Features:Bluetooth 2.1 communication interface; motion data sharing, historical data, online contests, sports community, real-time motion data upload

Using styles : Wrist

Size: 72*59*17mm

Weigth: 19g

Color: black\blue\red

Include:Bracelet ,Charger

Battery capacity:43mAh

Operating Temperature:-20~60°C

Charging voltage:5V

Operating voltage:3.7V

Display:5*19 LED

KEY :one key

Using time:5 days

Charging time:2 hours


Charging interval:<2 months

Mobile Systems:iphone/Android

Communication interface:BLE 2.1

Software:1.1

Main Function

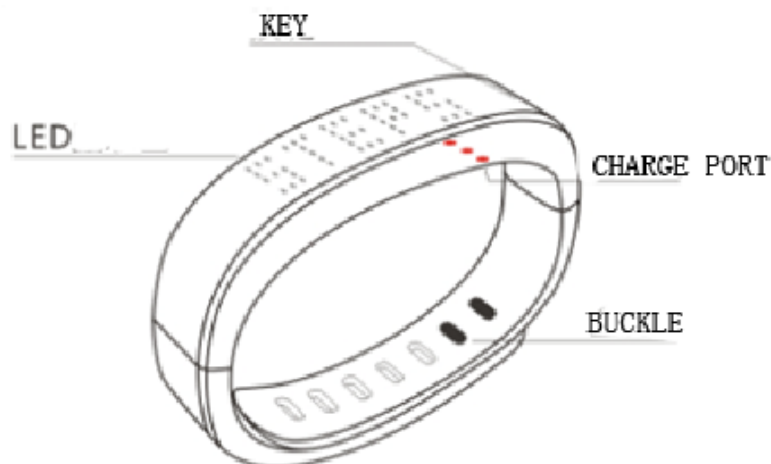

Conformation



Press 5s
open or close device



Press once
display time&target




Press again
display steps, dist,
cal successively




Double-click
change mode between
sport & sleep mode

Charging

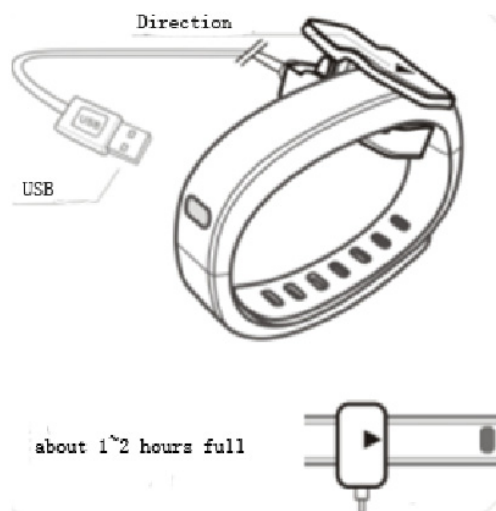

The application diagram

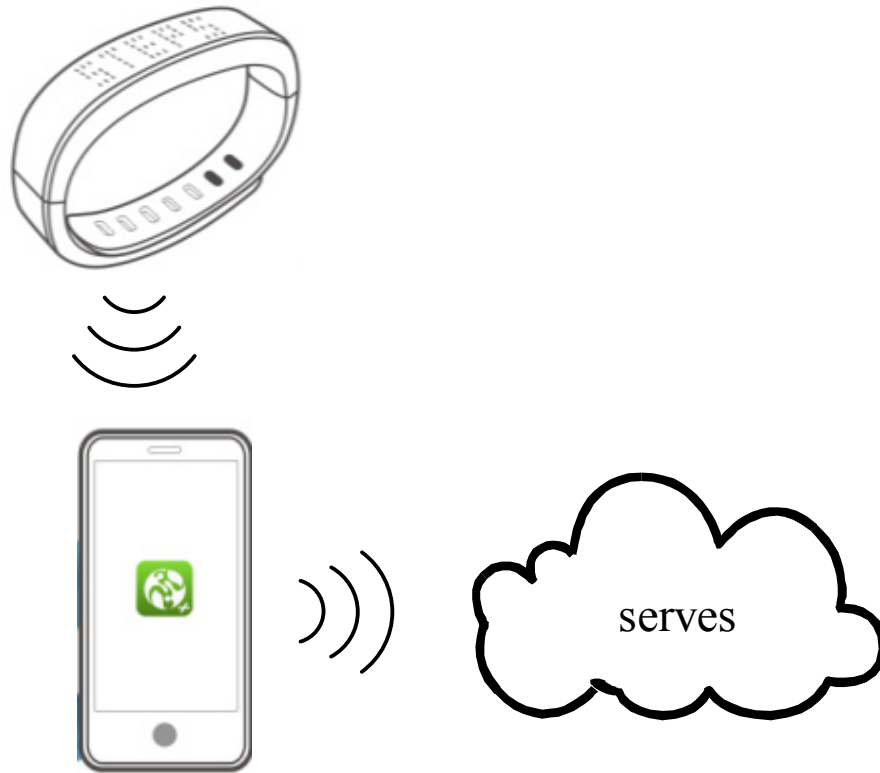

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.**
- Increase the separation between the equipment and receiver.**
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.**
- Consult the dealer or an experienced radio/TV technician for help.**